





FIXED IN PLACE - MULTI PANEL

# INSTALL GUIDE

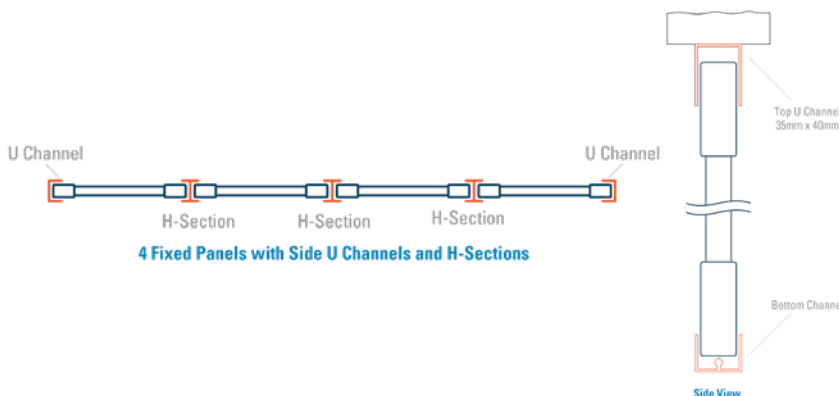

## PACK CONTENTS:

- U Channels [ Top, Bottom, Left, Right ]
- H-Section(s)
- Matching Colour Rivets
- Shutter Panels

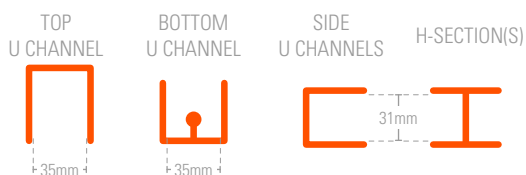

## WHAT YOU WILL NEED:



- Drill
- Pop Rivet Gun
- Drill Bits Suitable for Aluminium (4mm required for Rivets)
- Screw Tip Bit
- Fixing Screws (and required hardware) for securing to your reveal surface (eg. Wood, Steel, Masonry) - Speak to you local trade store personnel for advice

# STEP 1

## Fit the **Top 35x40mm U Channel**

- Pre-drill holes into Top Channel using diagram below
- Secure by screwing into reveal surface

### DRILL HOLE PLACEMENT

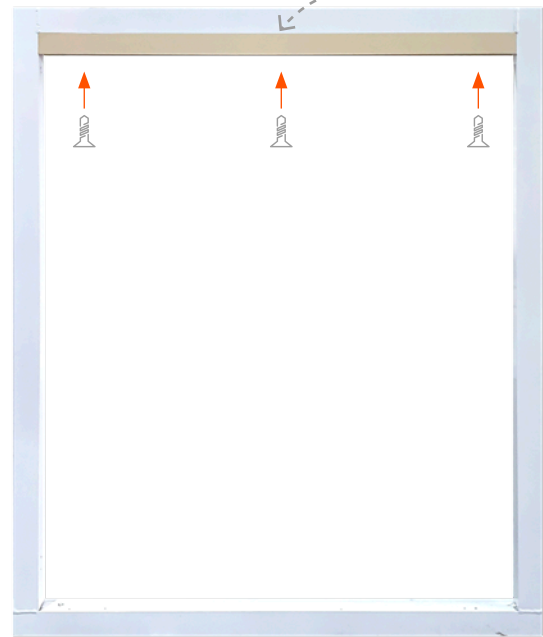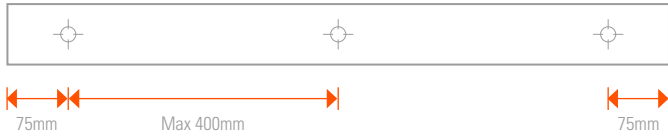




**T**  
Reveal edge has sticker indicating **Top (T) Channel**

# STEP 2

## Fit the **Bottom U Channel**

- Pre-drill holes into Bottom Channel using diagram below  
**NOTE:** Continue to alternate the side in which the holes are located
- Secure by screwing into reveal surface

### DRILL HOLE PLACEMENT

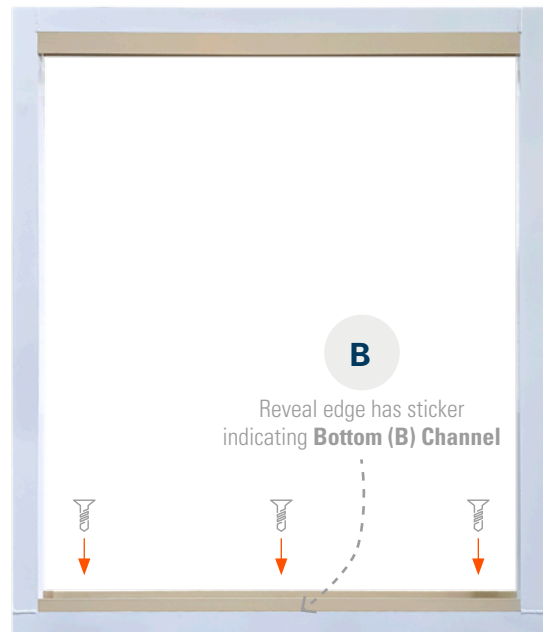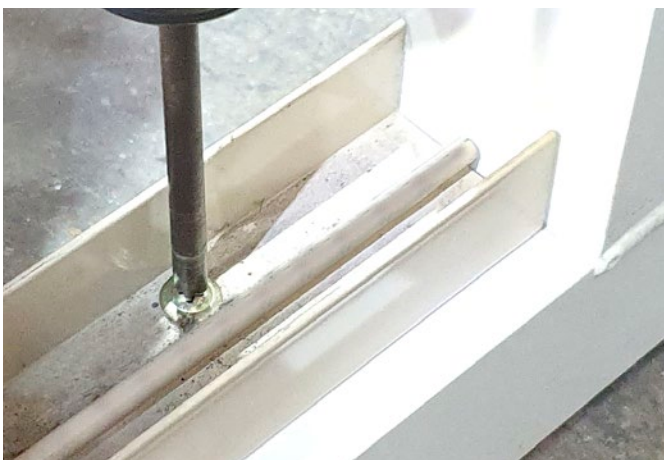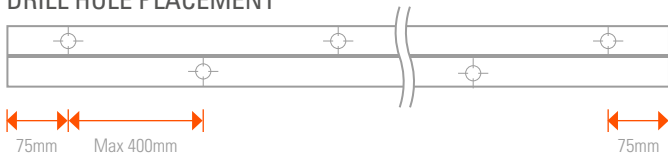



**B**  
Reveal edge has sticker indicating **Bottom (B) Channel**

# STEP 3

## Fit both **Side U Channels**

- a. Pre-drill holes into Side channel using diagram below
- b. Secure by screwing into reveal surface

### DRILL HOLE PLACEMENT

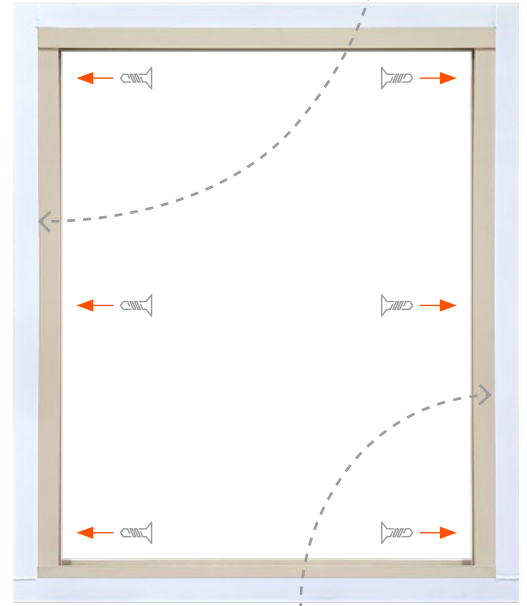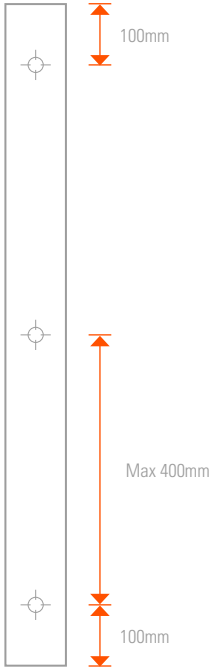

**L**  
Reveal edge has sticker  
indicating **Left (L) Channel**

**R**  
Reveal edge has sticker  
indicating **Right (R) Channel**

# STEP 4

## Fit first Shutter Panel in place:

- a. Slide the top edge into the Top U Channel first
- b. Sit the Shutter Panel into the bottom channel



## STEP 5

Repeating the same action with H-Section

- Insert top first, followed by bottom
- Push Panel and H-Section to one side

**REPEAT FOR MORE PANELS  
& H-SECTIONS**



## STEP 6

Starting from the left side, overlap the edge of the fixed channel and shutter panel(s) approx 10-15mm.

- Distribute each panel and H-Section evenly (X), then;
- Secure in place by: Drilling 4mm Holes in each corner where each channel, H-Sections and shutter panels overlap
- Now secure in place using pop rivet gun and rivets

